




## Cushion Clamp Assemblies





### INSTALLATION GUIDE FOR TUBE, PIPE, AND HOSE CLAMPING.

1. Determine correct size of nominal pipe (IPS), copper tube (outside diameter), or metric pipe (outside diameter).

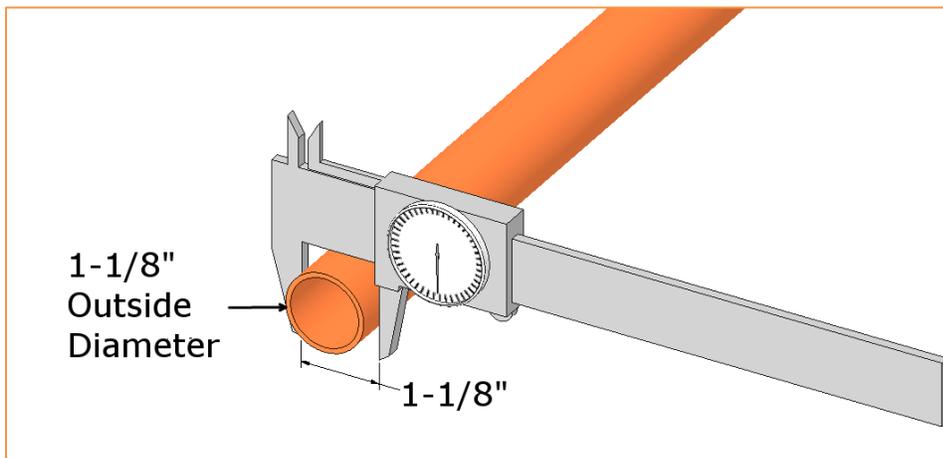

2. Secure appropriate Hydra-Zorb plastic cushion on pipe or tube and place on channel (any industry standard 1 5/8" wide).

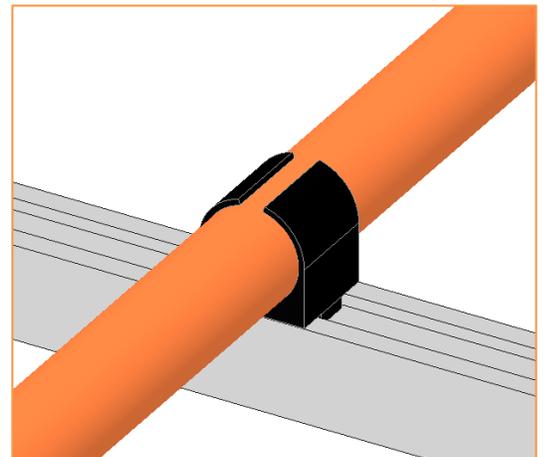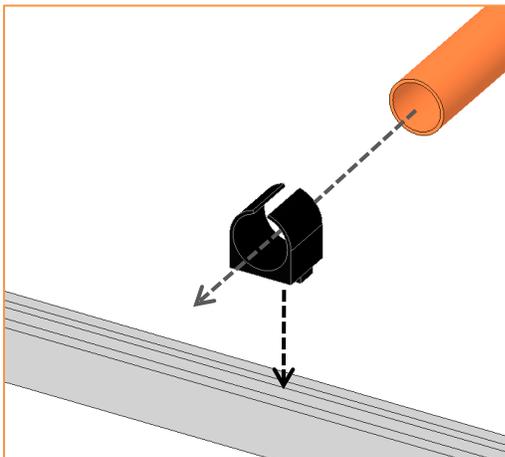


Find us online: [www.hydra-zorb.com](http://www.hydra-zorb.com)




(248) 373-5151 1751 Summit Drive – Auburn Hills, Michigan 48326



3. Place metal clamp straps around cushion in channel/strut.

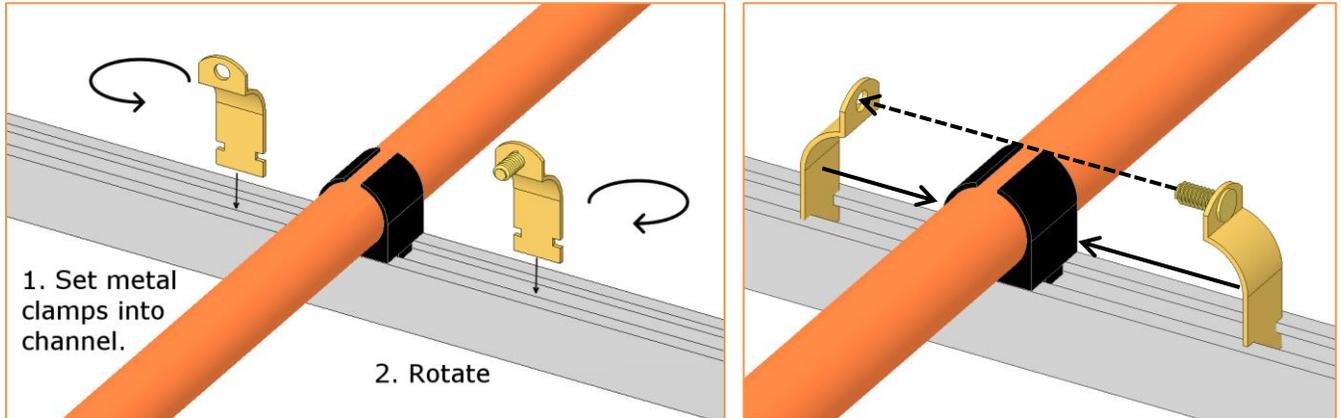

4. Thread locknut on stud and secure. Stud torque specification available upon request.

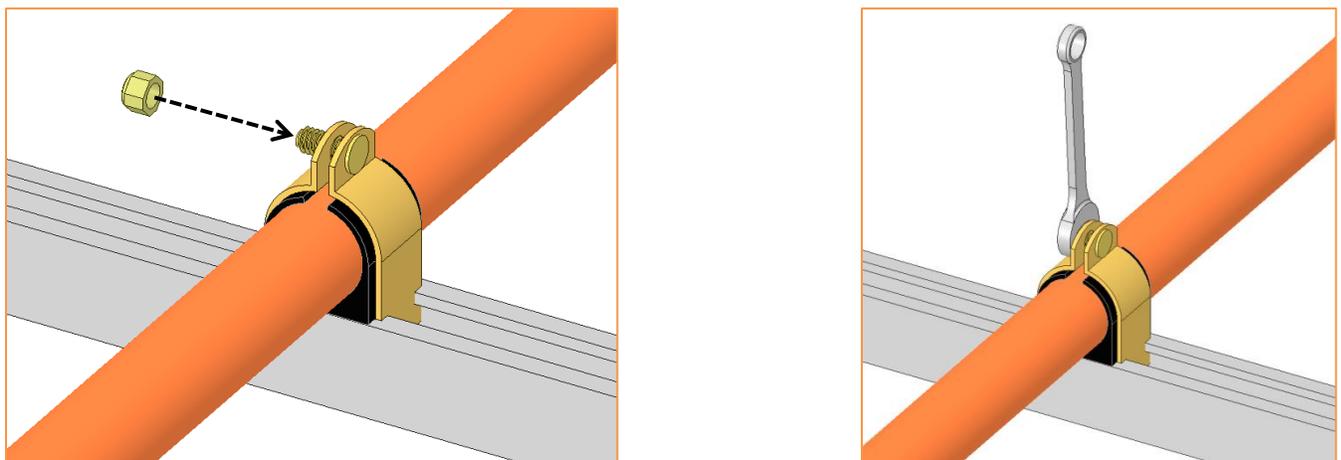

**HYDRA-ZORB KSHURE**



1751 Summit Drive – Auburn Hills, Michigan 48326 (248) 373-5151

Find us online: [www.hydra-zorb.com](http://www.hydra-zorb.com)

